 
 
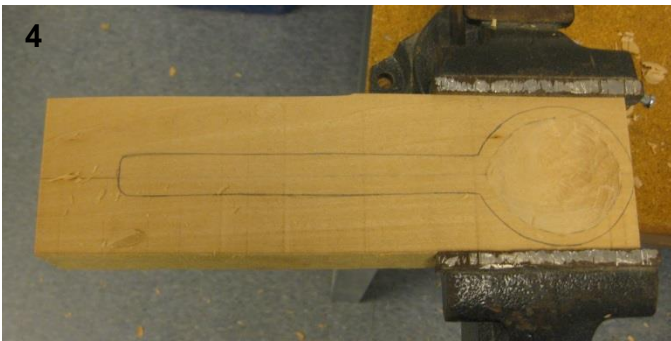 
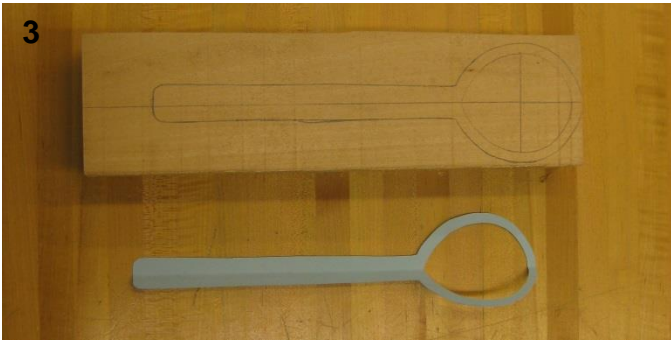 
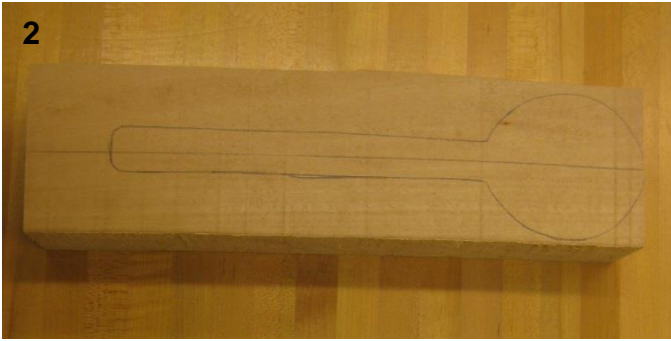 


IDIN Skill Builder: Wooden Spoon Participant Guide

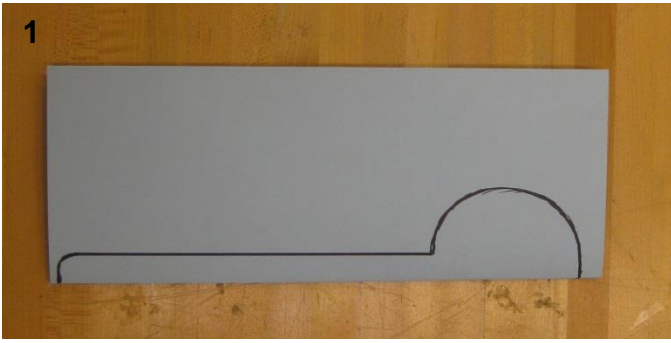



Mark the center and edge.

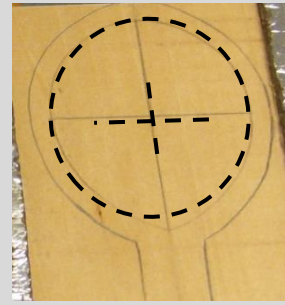


Aim toward the center line.






Alternate directions.


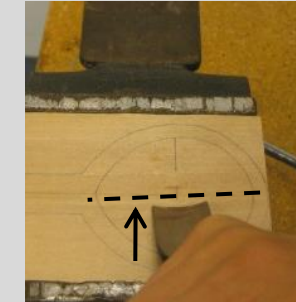
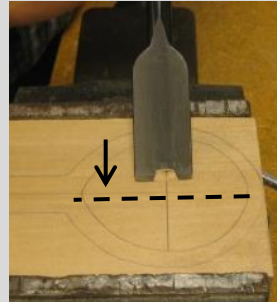


Work toward the outer edge gradually.

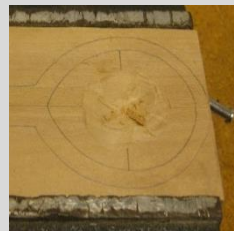



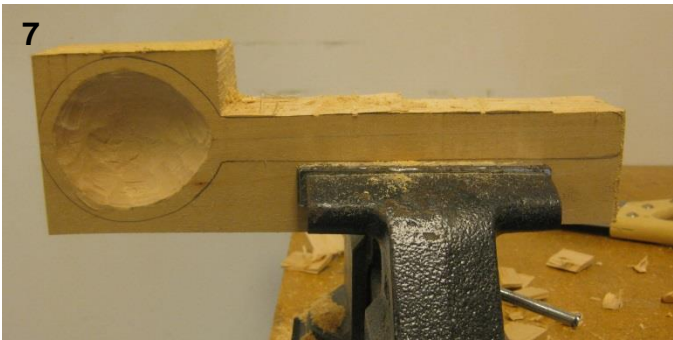
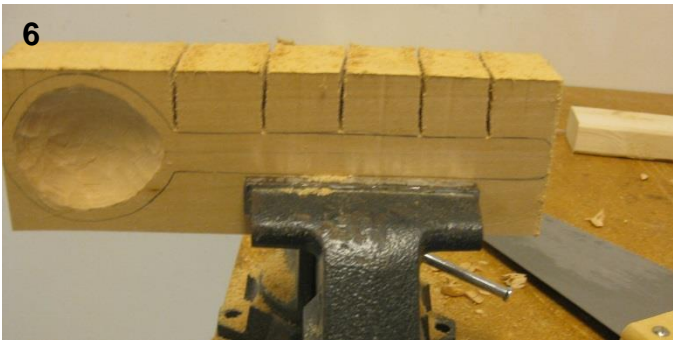
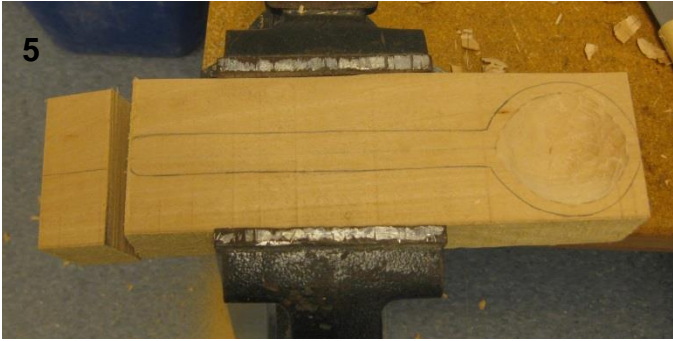


The chisel's blade is directional.

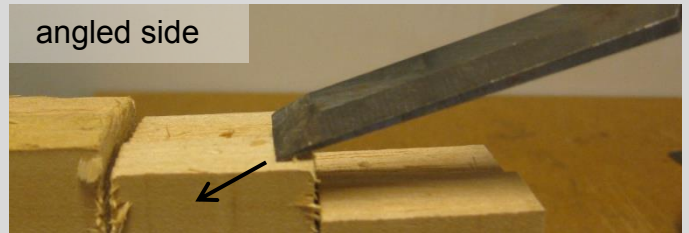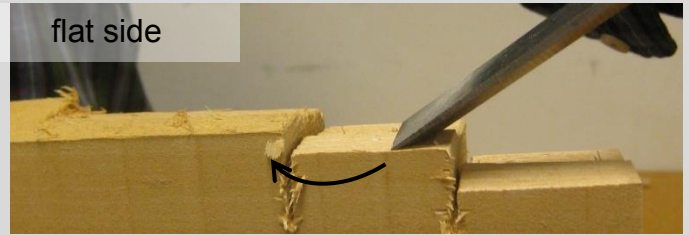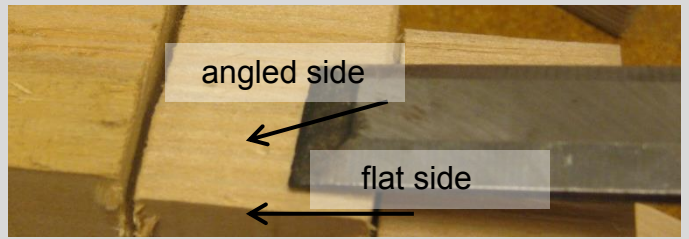


Create "end points" perpendicular to the chiseling direction using a wood or coping saw to prevent crack propagations.

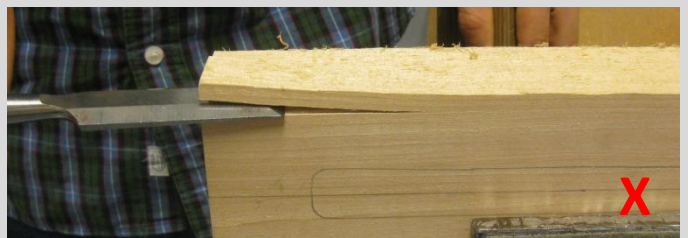


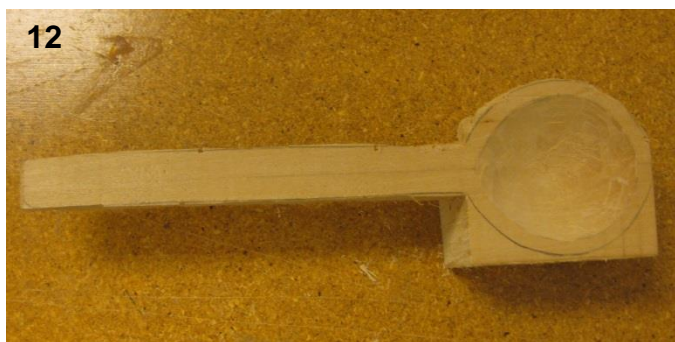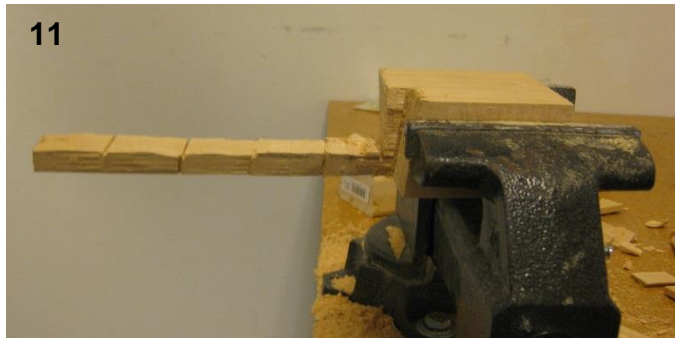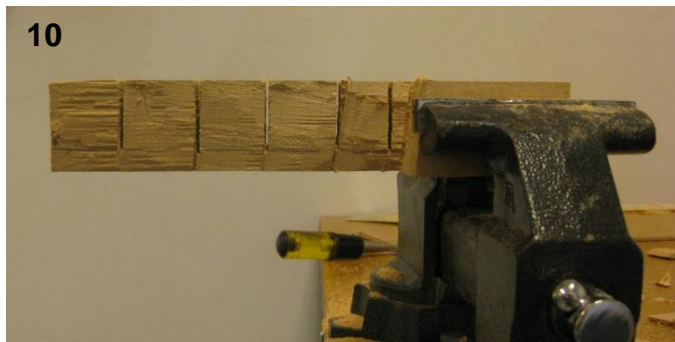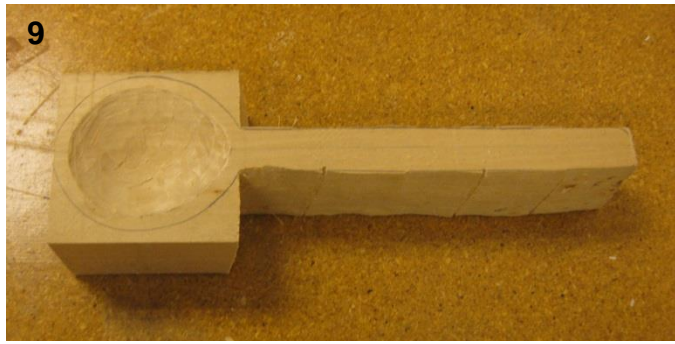



Apply force in the cutting direction only.

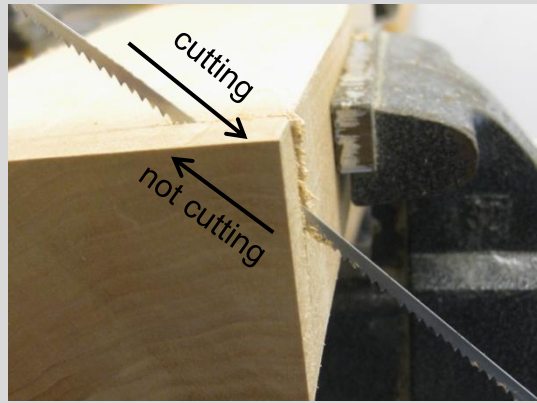

Create a notch to start.

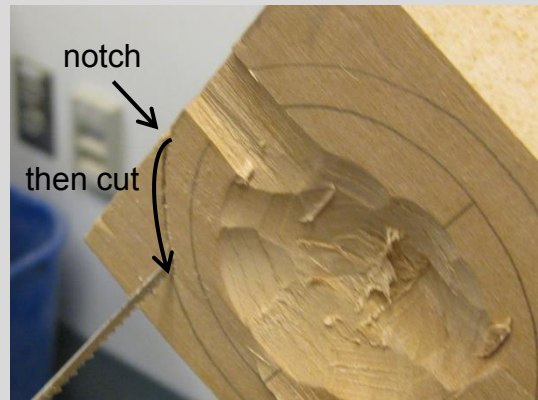

Keep the blade parallel with the saw's frame. Twisting the blade will cause it to break.

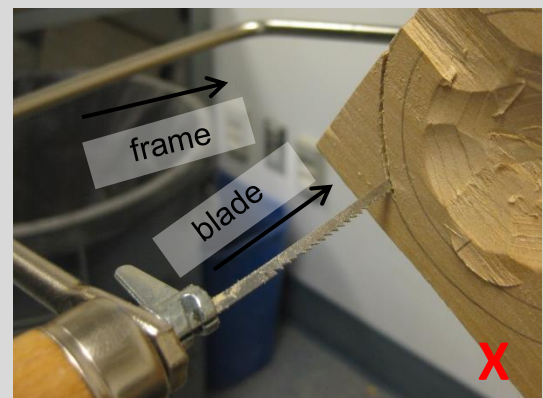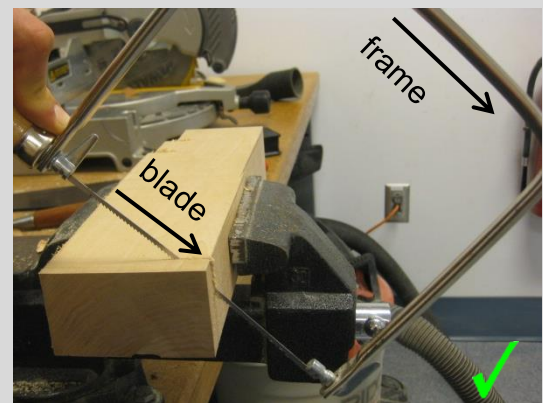




Use an edge to tear sand paper.



Create sanding blocks.

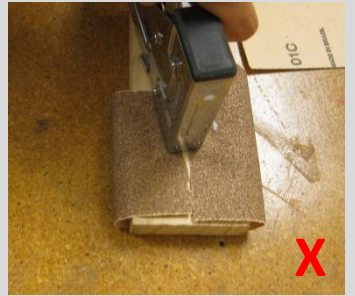

Work through the grits sequentially.

